Manual Strato

timberlab
natural outdoor solutions

Follow this installation guide for a safe installation.

General
- Follow this installation guide for a safe installation.
- Installation and connection of the lighting armature should be done by a certified installer
– Disable main supply before starting installation activities!
- Timberlab is not responsible for adjustments of modifications on the armature
- The armature is not dimmable!
- The earthing will be (is) connected to the RVS lid
- We do not recommend the use of concrete mortar for filling in the area around the column. If necessary/deriable, depending on the type of soil a stabilising sand can be applied.

Maintenance advice
The wood does not require any maintenance. In the course of time, the wood will grey in a natural way. If a treatment is chosen, a moisture regulating surface treatment should always be applied. Ask your supplier for advice! If desired, the LED module can be cleanded with a soft brush.

Warranty
The product comes with a two-year guarantee. Wood is a natural product. This wood is, unless expressly stated otherwise, fresh, undried, sawn and/or planed (if applicable). No furhter woodworking was performed. There is always a chance of warping and/or (dry) cracking of the wood. This may occur upon delivery or later. This is not a production error but a natural characteristic of the wood. Warranties do not apply for this.
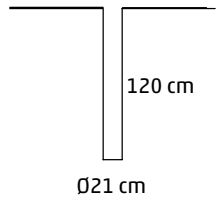
Product	Wood species	Certification	In ground/ post holder	Colour temperature	Version	Voltage	Variations
				K		VAC	
Strato (40)	Larch (1)	N/A (0)	L1+1000mm (00)	2.200 (5)	32mm hole (0)	230 (1)	N/A (00)
	Chestnut (2)	FSC (1)	L1+PH07 (07)	2.700 (1)	with cable (1)	12V - 24V AC/DC (2)	wall socket (02)
	Oak (3)	PEFC (2)	L1+PH08 (08)	4.000 (3)		DALI (3)	Connection box (08)
	Accoya (4)		L1 without post holder (95)	amber (4)			CASA nest box (10)
			L2+PH07 (37)				CASA insect box (11)
			L2+PH08 (38)				CASA bat box (12)

The product code is generated by selecting the options and taking the number in brackets ().

Timberlab B.V.
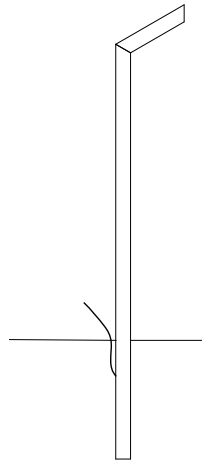Harskamperweg 32
6731 AB Otterlo

1-03-2022

C E

Strato incl cable

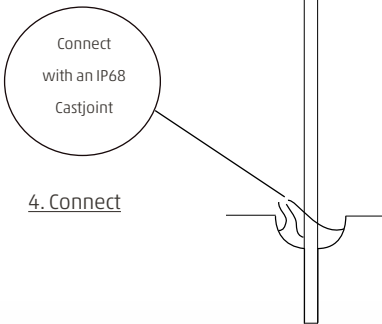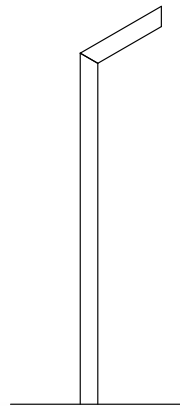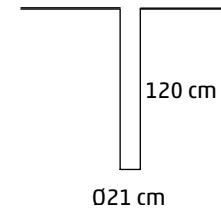| 1. Drilling Drill or dig holes in the ground.	2. Place Place the Strato in the hole.
120 cm Ø21 cm	
3. Digging -Dig out to 40cm deep. Make sure there is no voltage on the ground cables -Place the ground cables Connect with an IP68 Castjoint 4. Connect	5. Finishing -Straighten the pole with the help of a spirit level. -Close the hole in the ground.

Strato excl cable
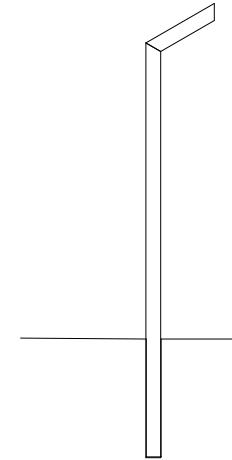
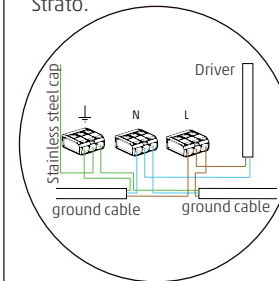| 1. Drilling Drill or dig holes in the ground.	2. Place Place the Strato in the hole.
120 cm Ø21 cm	
3. Digging -Dig out to 40cm deep. Make sure there is no voltage on the ground cables - Place the ground cables. - Feed the cables through the Strato. Stainless steel cap Driver N L ground cable ground cable 4. Connect	5. Finishing - Straighten the pole with the help of a spirit level. - Close the hole in the ground.

CE

1-03-2022